

# CLASSROOM OPERATING INSTRUCTIONS

- 1) Turn off the front row of lights.
- 2) Press the **POWER** button. (Wait about 30 seconds for the video display to warm up).

## To Show Scheduled Materials:

- Press **MENU** and then **2**.
- Read the MENU and press the **SOURCE** button (**A, B, C**, etc) that corresponds to the item you wish to play.
- Press the **PLAY** button or other control button as needed. Adjust the volume level with the **VOL +** or **-** buttons.  
If you do not have sound press **MUTE**.
- When you are finished, press **STOP**.

**\*\*\*Press FUNC and then 9 to display DVD root menu.\*\*\***

## To Show Computer Materials:

- Press **FUNC** and then **B**
- If you are also showing a scheduled source you will need to press **FUNC** and then **A** to switch between the two.

## To Show Local Inputs:

- Press **FUNC** and then **C**
- Only audio can be controlled with the panel. Use Local equipment for other controls.

- 3) Press **POWER** to turn the video display off.

If you are having difficulty getting the system to operate, please call **5-5044**.

